



# Spray & Up

## EASY INSTALLATION WALLPAPER

## Brava™ Wallpaper

[www.bravawallpaper.com](http://www.bravawallpaper.com)

### SIMPLE INSTALLATION FOR WALL DECORATION


Quick, easy, and clean installation

- No need for paste, just spray water on the back of the material
- Easy to apply, align and re-position
- Reduced clean-up time

The ideal product for home & office

- 100% PVC & PFAS free
- Suitable for both professional and home markets
- Ease of use provides opportunities for frequent use

### REDUCED APPLICATION TIME BY UP TO 60%

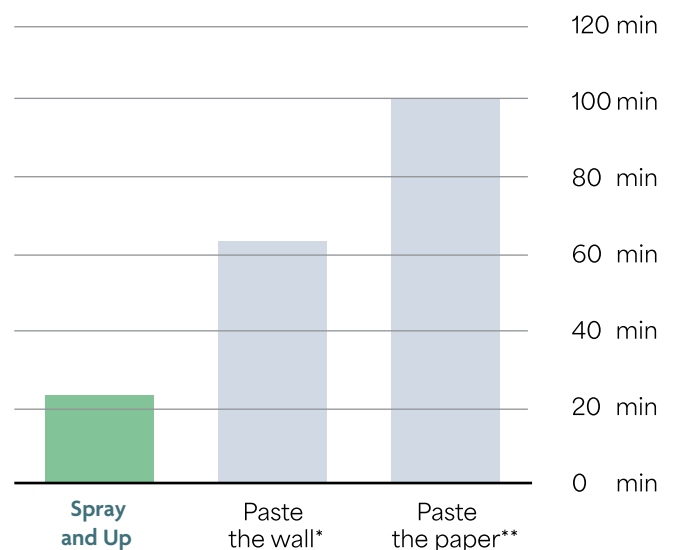

Area of 4.5m<sup>2</sup> included one corner, one electrical/ internet outlet, and baseboard trim \*Actual time \*\*Comparative estimate, based upon not hanging from roll, material expansion time and longer time to cut.



**Brava™**



To request a sample or learn more about Brava™ Wallpaper scan the QR code or go to our website at [bravawallpaper.com](http://bravawallpaper.com)

## PRODUCT INSTALLATION

- The wall surface should be clean, dry, and free of debris. Priming is always recommended for best results, and especially on walls with uneven surfaces or flaking paint.
- Also suitable for use over following panels – Acrylic, Di-bond and Foamex.
- Standard spray bottle or a damp sponge can be used.
- Apply water to the back of the material at rate of 100ml per 1sqm, paying particular attention to seams and edges.
- Material can be re-positioned and re-aligned during first 10 minutes. If sliding the material into position is too difficult gently pull back the material and apply more water on the wall before re-applying. Alternatively, it's possible to apply the water to the back of the material.

## PRODUCT REMOVAL

When it's time for a change, product can be easily removed from the wall.

- Using a bucket of water and a sponge, thoroughly wet the wall cover, starting from the top. Keeping the wall cover wet, you will be able to slowly peel it from the wall and recover a clean wall.



## PACKAGING & HANDLING RECOMMENDATIONS

### Humidity:

- Minimize the exposure of unprotected material to warm and humid conditions as much as possible (<50% humidity, <23°C). Exposed sheets can begin to feel tacky after 10 minutes when exposed to humid environments. Dehumidifying or drying the web will render the sheets non-tacky.

### Packaging:

- Rolls should be packaged and stored in a sealed polybag and/or stretch wrap to protect the entire roll (surface, edges, and core) from humidity.
- It is recommended to insert 5g silica gel pads inside the core of the product.
- As a guide, use as follows:
  - 25LM => 1 pad
  - 50LM => 2 pads
  - 100LM => 3 pads
  - 150LM => 5 pads

### Tension:

- For additional protection, use minimal roll tension when winding after printing (<1N/cm) and/or a protective release liner if low tension cannot be used.

Commercial Grade	g/m <sup>2</sup>	Effect	Type	Printing	Washability	Recommended Application	Fire Rating
Brava™ Spray & Up - Smooth							
Spray & Up Matte 150	150	Matte	Uncoated Nonwoven	UV / Latex	Washable	Light to Medium traffic	Euroclass B-s1-d0
Spray & Up Satin 150	200	Satin	Coated Nonwoven	UV / Latex	Highly Washable	Light to High traffic	Euroclass C-s1-d0
Brava™ Spray & Up - Textured							
Spray & Up Fibrous	167	Fibrous	Uncoated Nonwoven	UV / Latex	Washable	Light to Medium traffic	Euroclass B-s1-d0

