



## Brava Spray & Up (Pre-Pasted) Wallpaper Installation Instructions

Pre-pasted wallpaper can be installed using any of the following three methods. Choose the method that works best for your project and workspace.

### Wall Preparation

1. Walls must be clean, smooth, and dry before installation.
2. Remove old wallpaper, loose paint, dust, grease, and debris.
3. Repair any holes or imperfections and sand smooth.
4. Apply a quality wallpaper primer/sealer to all wall surfaces.
5. Allow newly painted or primed walls to cure for at least 7 days before installing wallpaper. Fresh paint that has not fully cured can cause poor adhesion or bubbling.
6. Turn off strong airflow or fans during installation to prevent edges from drying too quickly.

---


### Wall Preparation Tips

- Flat or matte paints can absorb moisture and may reduce adhesion.
- Satin or eggshell finishes primed with wallpaper primer generally work best.
- Avoid installing wallpaper directly over unprimed drywall

---

### Method 1: Water Tray / Dunk Method

1. Fill a clean water tray or bathtub with lukewarm water.
2. Roll the wallpaper loosely with the pasted side facing outward.
3. Submerge the strip completely in water for approximately 15 seconds to activate the adhesive.
4. Remove the strip and gently pull it through your fingers to remove excess water
5. Position the wallpaper on the wall starting at the ceiling line. Brava Spray & Up can be installed immediately without booking.
6. Smooth with a wallpaper brush or smoothing tool, working from the center outward to remove air bubbles.
7. Trim excess wallpaper at the ceiling and baseboard with a sharp utility knife.

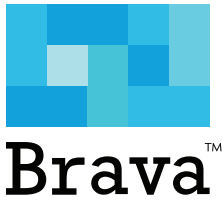

## Brava Spray & Up (Pre-Pasted) Wallpaper Installation Instructions (cont.)

### Method 2: Spray the Back Method

1. Place the wallpaper strip pattern-side down on a clean surface.
  2. Using a spray bottle, evenly mist the pasted backing until fully activated.
  3. Make sure all pasted areas are damp but not soaking wet.
  4. Hang the strip on the wall, aligning the pattern as needed.
  5. Smooth the wallpaper from the center outward to remove bubbles and wrinkles.
  6. Trim excess material at the top and bottom.
- 

### Method 3: Spray the Wall Method

1. Lightly mist the wall surface with clean water using a spray bottle.
  2. Do not oversaturate; the wall should be damp, not dripping wet.
  3. Position the dry wallpaper strip onto the damp wall.
  4. Adjust alignment and match patterns as needed.
  5. Smooth firmly with a wallpaper brush or smoothing tool to ensure proper adhesion.
  6. Wipe away any excess moisture with a clean sponge or cloth.
  7. Trim excess wallpaper at the ceiling and baseboard.
- 

### Helpful Tips

- Use a seam roller lightly to secure seams.
- Wipe adhesive residue immediately with a damp sponge.
- Change water frequently when using the dunk method.
- Allow wallpaper to dry completely before exposing the room to excessive humidity or cleaning.